



# TTLOCK APP Manual


VER.202308

## 1. Registration and login


### 1.1 Register

Users can register the account by mobile phone and Email which currently support 200 countries and regions on the world. The verification code will be sent to user's mobile phone or email, and the registration will be successful after the verification. When you send an ekey to a phone number or email, and this phone number or email hasn't been registered yet, they will be registered automatically.


Phone

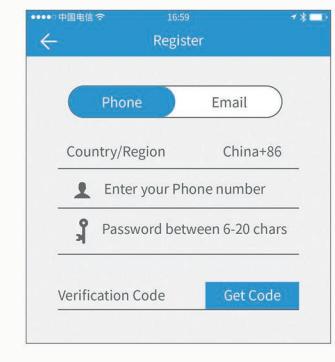

Phone → Register

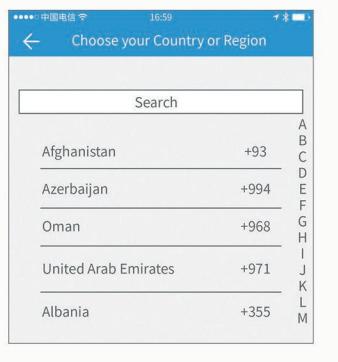




Email

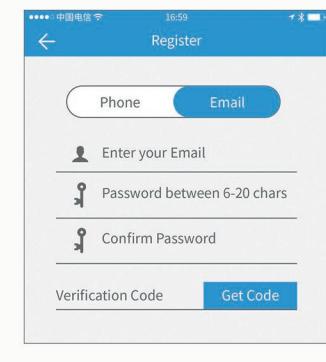

Email → Register




### 1.2 Security question settings

You will be taken to the security question settings page when registration is successful. When log in on a new device, the user can authenticate himself by answering the above questions.

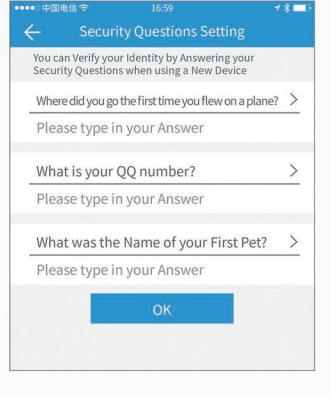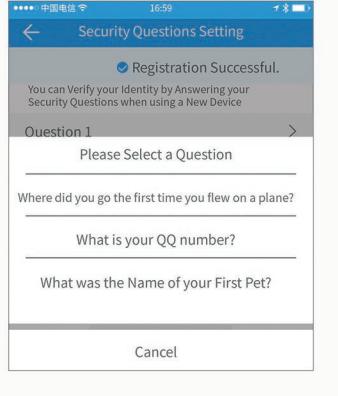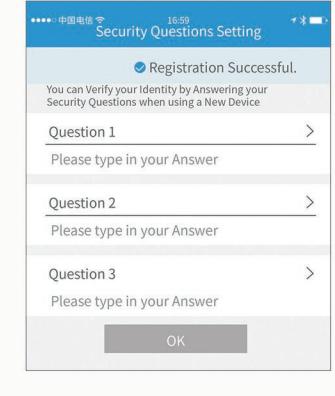

### 1.3 Login authentication


Log in with your mobile phone number or email account on the login page. The mobile phone number is automatically recognized by the system and does not input the country code. If you have forgotten your password, you can go to the password page to reset your password. When reset the password, you can receive a verification code from your mobile phone and email address.

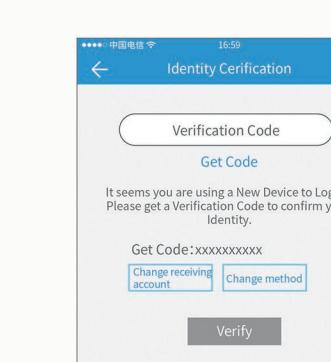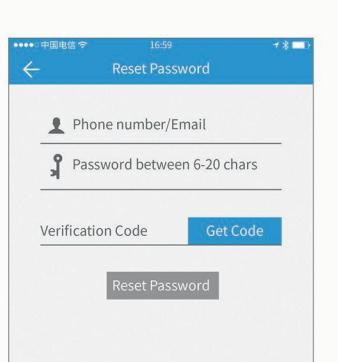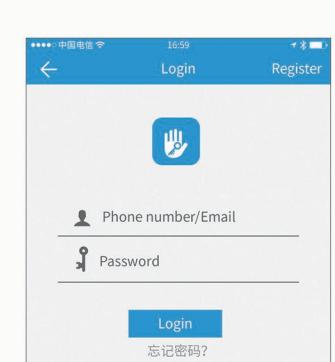

03

## 5. Customer service



The user can consult and give feedback through the AI customer service .

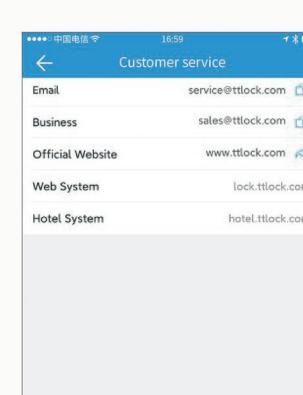

## 6. Settings


### 6.1 Sound

When using the TTLock APP to unlock, the phone will emit an alert tone, tap to set to turn on or off.

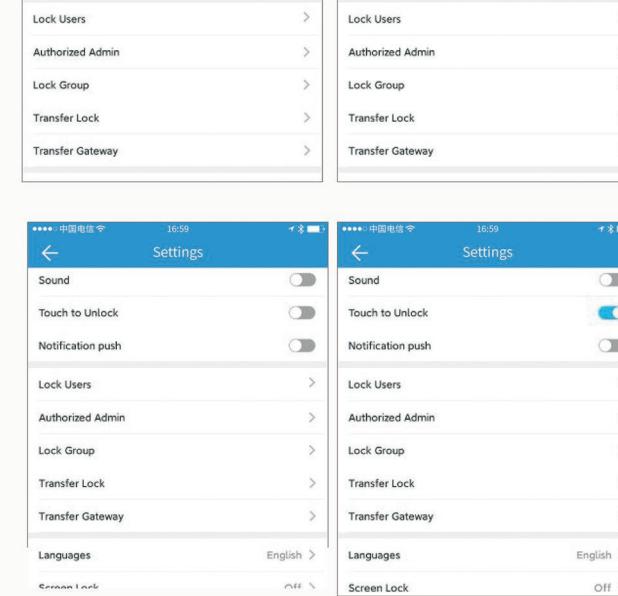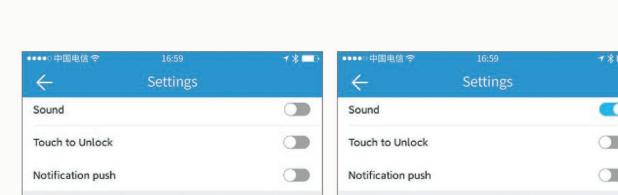

### 6.2 Touch to unlock

There are lots of locks in your account, and you don't want to search for a lock to open everyday. Turn on the "Touch to Unlock" in the App's "Settings" menu. With this option on, you can open door by just touching the lock to wake up it.

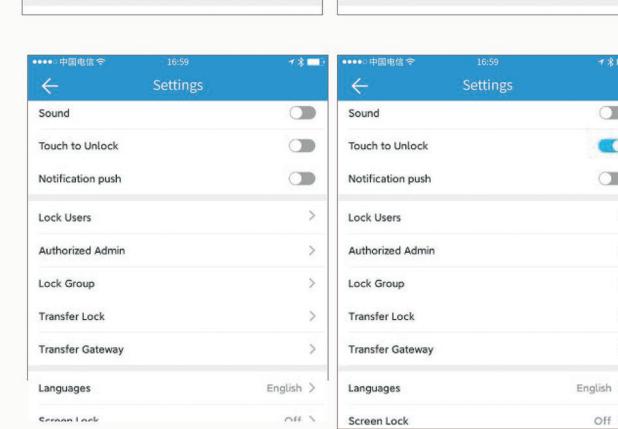

### 6.3 Notification push

Receive the notification when someone open door. Enable the "Unlock Notification" option in the lock's "Settings" menu. Then the administrator will receive notification when someone open door.

Please read the manual carefully before installation and keep this manual at a secure place.

• Please refer to sales agents and professionals for information not included in this manual.

## Introduction

The App it includes door locks, parking locks, safe locks, bicycle locks, and more. The App communicates with the lock via Bluetooth BLE, and can unlock, lock, firmware upgrade, read operation records, etc. The Bluetooth key can also open the door lock through the watch. The app supports Chinese, Traditional Chinese, English, Spanish, Portuguese, Russian, French, and Malay.



## Download

### APP

The iOS version can be found in the App Store and the Android version can be found in Google Play, App Store, Baidu, Alibaba, 360, Huawei and Xiaomi.



Scan to download The App

### Web

The web side can be logged in to <https://lock.sciner.com/> for management, it is recommended to use Google Chrome.

### Computer

Download : [http://download.ttlock.com/appDownload/ttlock/TTLock\\_Card\\_Encoder\\_setup\\_1.2.0.exe](http://download.ttlock.com/appDownload/ttlock/TTLock_Card_Encoder_setup_1.2.0.exe)

## Contents

APP ↴



### 1. Registration and login 03-04

- 1.1 Register 03
- 1.2 Security question settings 03
- 1.3 Login authentication 03
- 1.4 Ways of identifying 04

### 2.Lock management 04

- 2.1 Lock adding 04
- 2.2 Add WiFi smart lock 04

### 3. Gateway 05

- 3.1 Gateway type 05
- 3.2 Add Gateway 05
- 3.3 Gateway functionality 05

### 4. Messages 05

### 5.Customer service 06

### 6. Settings 06-09

- 6.1 Sound 06
- 6.2 Touch to unlock 06
- 6.3 Notification push 06
- 6.4 Lock Users 07
- 6.5 Authorized Admin 07
- 6.6 Lock Group 07
- 6.7 Transfer Lock 07
- 6.8 Transfer Gateway 07
- 6.9 Languages 08
- 6.10 Screen lock 08
- 6.11 Hide invalid access 08
- 6.12 Locks requiring ophone online 08
- 6.13 Services 08
- 6.14 About 09
- 6.15 Logout 09
- 6.16 Delete Account 09

### 7. Work with 09

### Overview of key features 10-16

#### ① key management 10-11

- Send ekey 10
- Key management 10
- Deadline warning 11

#### ② Passcodes 11

- Generate passcode 11
- Password management 11

#### ③ Cards 12

- Add Card 12
- IC Card management 12
- Android NFC card issuance 12

#### ④ Fingerprint 12

#### ⑤ Face 12-13

#### ⑥ Palm vein 13

#### ⑦ QR code 14

#### ⑧ Remote 14

#### ⑨ Authorized Admin 14

#### ⑩ Records 14


#### ⑪ Lock Settings 15-17

- Basics 15
- Wireless Keypad 15
- Door Sensor 15
- Remote Unlock 15
- Auto Unlock 15
- Passage Mode 16
- Lock Sound 16
- Tamper Alert 16
- Privacy Lock 16
- Reset Button 16
- Lock Clock 17
- Diagnosis 17
- Upload Data 17
- Import from another lock 17
- Firmware Update 17
- Attendance 17

01

### 1.4 Ways of identifying

There are two ways of security verification. One is the way to get the verification code via the account number, and the other is the way to answer the question. If the current account is set the "answer the question" verification, then when the new device is logged in, there will be an "answer question verification" option.

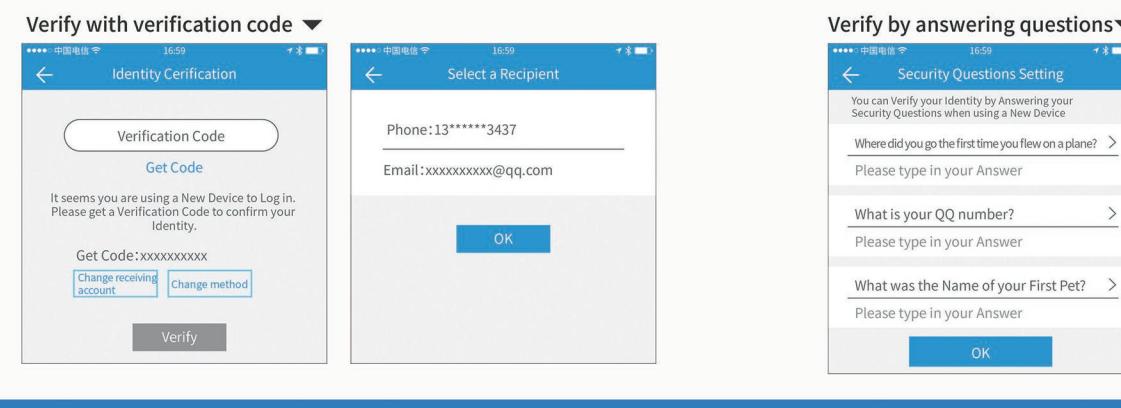


### 2.Lock management

The App supports multiple types of lock, including door locks, padlocks, safe locks, smart lock cylinders, parking locks, and bicycle locks. When adding a device, you must firstly select the lock type. The lock needs to be added to the app after entering the setting mode. A lock that has not been added will enter the setting mode as long as the lock keypad is touched. The lock that has been added needs to be deleted on the App first. The added lock will be shown in the lock list, together with lock name and battery level. To add a lock, please wake it up first by touching the keypad, or swiping card. If the lock has been woken up but still not in setting mode, it may have been added by others yet. Please reset it first then try again.

### 2.1 Lock adding

- 1) Call out menu interface in the upper left corner of the interface;
- (2) Select Add Lock;
- (3) Select the corresponding type of door lock to add it according to the prompt;
- (4) The door lock name has a "+" sign in black to indicate that it can be added.

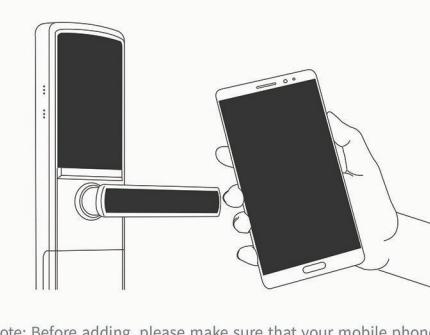

Note: Before adding, please make sure that your mobile phone's Bluetooth is turned on and the network is turned on, if the network signal is not good, please add an environment with a strong signal and upload data. Locks that have already been added to the administrator cannot be added, so please remove the administrator or reset the lock after the lock is reset.

02

### 3. Gateway

#### 3.1 Gateway type

- G1(Wi-Fi) Network:2.4GWiFi
- G2(Wi-Fi) Network:2.4GWiFi
- G3(G3P/PePo) Network:RJ45
- G4(4G) Network:TLE(4G)


#### 3.2 Add Gateway

Gateways are added via an app before they can be used. Here are the steps:

- (1) open the APP;
- (2) Touch the "≡" icon on the top left of the screen;
- (3) Select [Gateway];
- (4) select the "G2";
- (5) Plug in the Gateway and power it on;
- (6) While the light is flashing alternately in red and blue, press "+" sign;
- (7) Add Gateway;
- (8) Select the network and input your WiFi password.

**⚠️** Notice: if the above process times out, please power off and try again.

\* Gateway coverage distance: 10 meters without obstruction

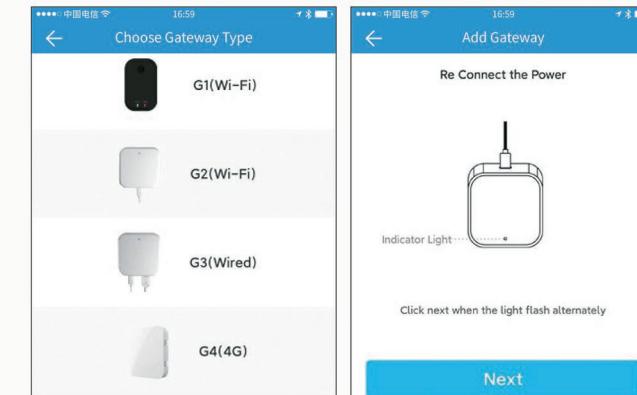

#### 3.3 Gateway functionality


##### Gateway role

	No gateway	Have a gateway	
Obtain random passwords remotely	✓	✓	The door lock can be used normally in the state of no gateway, and if you need to remotely modify and delete the password, remotely issue fingerprints, issue cards and other functions, you need to be equipped with a gateway to achieve it.
The APP opens the door	✓	✓	
Set permissions	✓	✓	
Remotely modify and delete passwords	✗	✓	
Remote card issuance, fingerprint	✗	✓	
Open the door remotely	✗	✓	
Upload door opening records in real time	✗	✓	

03

## 4. Messages


Here you can receive system push reminders and other message content..

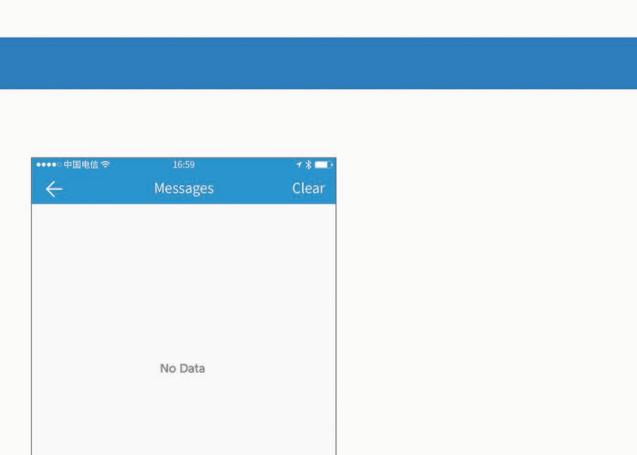

04

### 6.9 Languages


TTLOCK currently supports multiple languages, you can call out the menu interface in the upper left corner of the interface, click Settings, select Multi-language, and set the following system or other languages as needed.

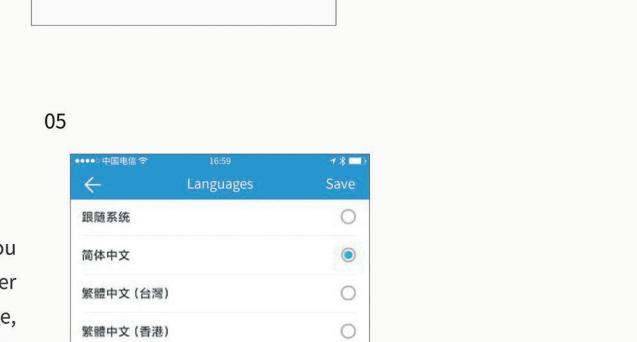

05

### 6.10 Screen lock


This feature allows you to access APP after being verified with Fingerprint/Face ID/Password.

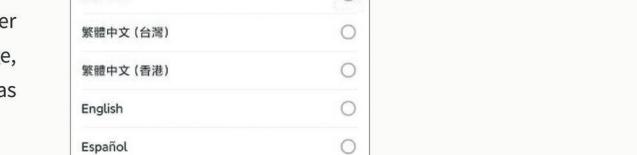

06

### 6.11 Hide invalid access


This Feature allows you to hide passcodes, ekeys, cards, and fingerprints which are invalid for a period of time.

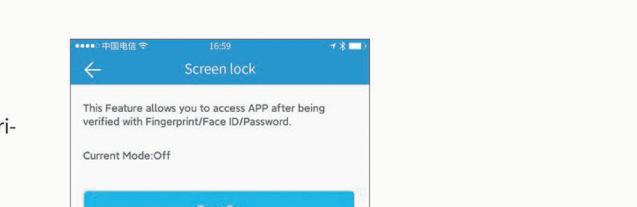

07

### 6.12 Locks requiring ophone online



User's phone is required to be online to unlock these selected locks with APP.

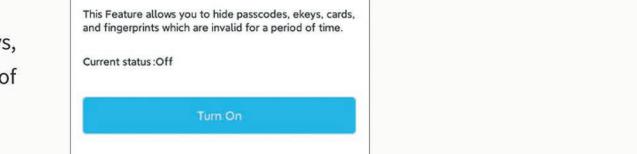

08

### 6.13 Services

Call out the menu interface in the upper left corner of the interface, click Settings, select value-added services, you can purchase SMS, email and real-name authentication; You can also activate the premium version of the function, including SMS template, email template, batch authorization administrator, group key, and batch group function.

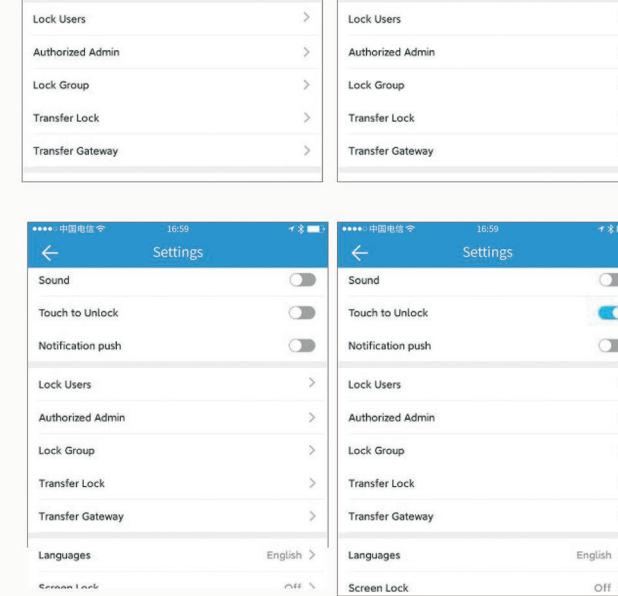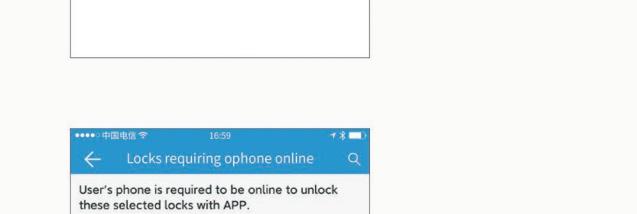

06

Receive the notification when someone open door. Enable the "Unlock Notification" option in the lock's "Settings" menu. Then the administrator will receive notification when someone open door.

07

Call out the menu interface in the upper left corner of the interface, click Settings, select the transfer gateway, select the gateway that needs to be operated, in this interface, you can transfer the gateway to other individual users of Tongtong Lock, or transfer to the good house housekeeper user, after the transfer, you will lose the management authority of the gateway.



08

## 6.14 About

Call out the menu interface in the upper left corner of the interface, click Settings, select About, you can view the version number and introduction of the TTlock APP, the privacy policy and user agreement, as well as the list of personal information collection, application permission description and third-party sharing information list.

## 6.15 Logout

Call out the menu interface in the upper left corner of the interface, click Settings, select Exit Account, and log out of the current account.

## 6.16 Delete Account

All your Account Information will be Removed from the Platform PERMANENTLY and cannot be Recovered. Do you want to Delete?

## 7. Work with

Call out the menu interface in the upper left corner of the interface, select value-added services, you can purchase SMS and email; You can also activate the premium version of the function, including SMS template, email template, batch authorization administrator, group key, and batch group function.

### ③ Cards

#### Add Card

You need to add the IC card first. The whole process needs to be done via the app beside the lock. The validity period of the IC card can be set, either permanent or time-limited.

Card list: All cards of this lock will be listed here. Click "Reset" at the top right to delete all of them.

Select validity period type and enter the name, then place the card on the lock to be added.

#### IC Card management

In the card's detail page, you can view, change, or delete it.

#### Android NFC card issuance

Android phones can issue cards NFC (gateway required).

### ④ Fingerprint

Fingerprint management is similar to IC card management. After adding a fingerprint, you can use the fingerprint to unlock the door.

#### ⑤ Face

• All faces of this lock will be listed here. Click "Reset" at the top right to delete all of them. Click "Sensitivity" to set the sensitivity of the camera on the lock.

• In the face's detail page, you can view, change, and delete it.

### ⑥ Palm vein

• You can see the palm vein that has been added here. There are "Reset" and "Sensitivity" in the menu. Click "Reset" to delete all palm vein data; click "Sensitivity" to adjust the camera's recognition sensitivity.

• You can enter the palm vein details page from the list to view, modify, and delete.

• Select the type, enter the name, follow the prompts to align your palm with the lock's camera, and record the palm vein.

### ⑦ Lock Settings

#### Basics

Lock settings - basic information, you can view the lock number, MAC/ID, power level, expiration date, view or modify the lock name, group, view the administrator unlock password.

### Wireless Keypad

Add method:  
(1) Lock settings;  
(2) Wireless keyboard;  
(3) Add wireless keyboard;  
(4) Complete the addition according to the APP prompts.

### Door Sensor

In the lock's setting menu, Click "Door Sensor", you will see this lock's door sensor, or you can add a door sensor here.

In the door sensor page, you can see all its information, like battery level.

### Remote Unlock

This Feature allows you to Unlock the Smart Lock Remotely via a Gateway. This Feature can ONLY be Turned ON or OFF via Bluetooth.

### Auto Unlock

Auto lock. When this feature enabled, the lock will lock automatically after the set time. Find "Auto Lock" in the lock's setting menu. Enable this feature by setting a time.

Please unlock it for one time first to make the setting available.

## Overview of key features

After adding lock, you can grant access permissions to others, including ekey, passcode, card, fingerprint, face, and etc.

### APP menu bar (add lock, gateway, language)

Lock name, lock status, Electricity

### APP unlocking, Remote Unlock

### Unlocking method

Lock settings, Authorized Admin, Records


\*If your smart lock does not support a function in the APP interface, the function will not be displayed on the APP interface.

### ① key management

#### Send ekey



You can see all ekeys here. Press "Reset" at the top right to delete all of them. In the ekey's detail page, you can view, change, freeze, and delete it. Click "Send ekey" to send ekey to someone else. If the recipient account hasn't been registered yet, it will be registered automatically. A SMS message or email with password will be sent.

Remote unlock: Gateway is needed to do remote unlock. Identity verification: (It only works in China).

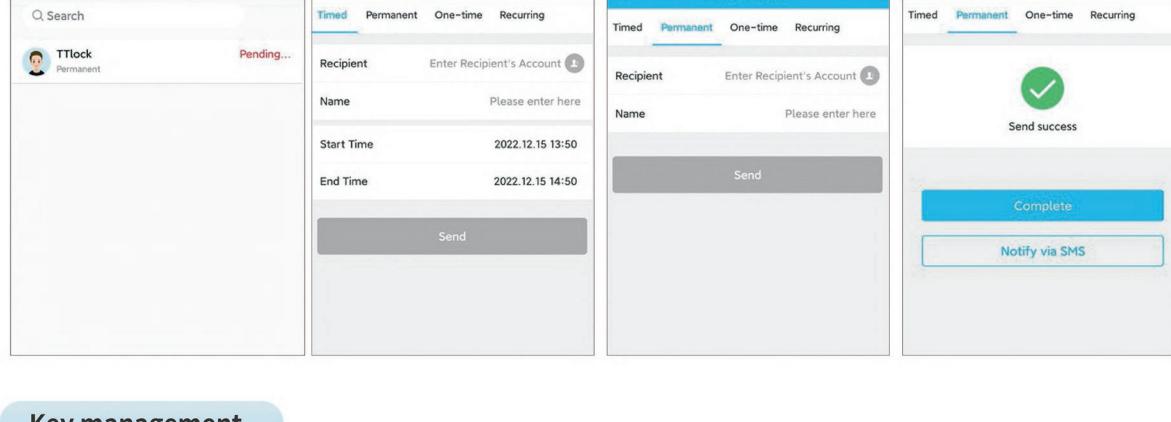

### Key management

In the ekey's detail page, you can view, change, freeze, and delete it. You can see all ekeys here. Press "Reset" at the top right to delete all of them.

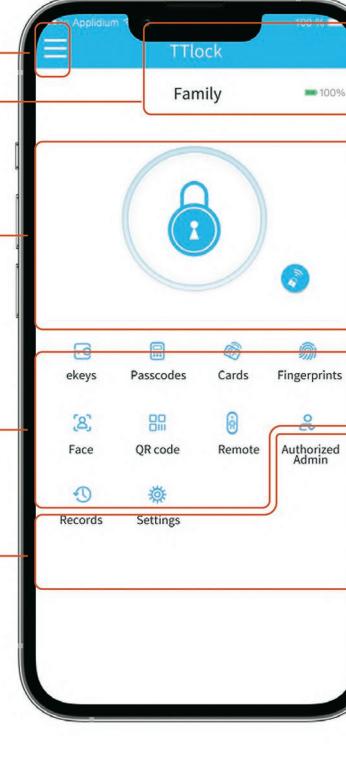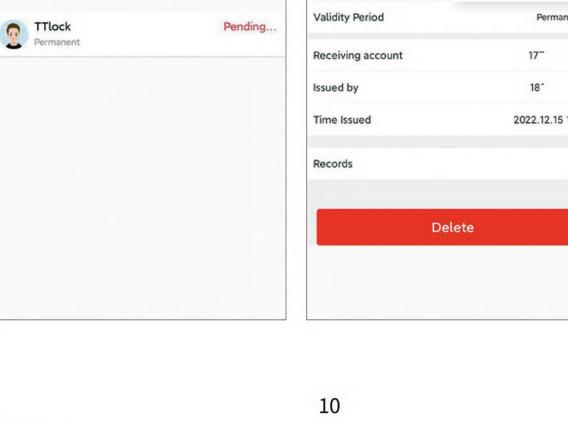

Records Setting


Authorized Admin

Records

Setting

## Deadline warning

System will show two colors for deadline warning. The yellow means close to expiring and the red means it has expired.

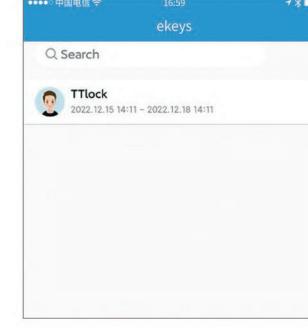

## ② Passcodes


### Generate passcode

You can see all passcodes here. Press "Reset" at the top right to delete all of them. You can also create an "Erase" passcode to delete all other passcodes. Or create a custom passcode.

Erase: When you input "Erase" passcode on lock, all other passcodes will be disabled.


One-time passcode only works within 6 hours.

The passcodes with type permanent, timed, and recurring should be used at least once after their "start time". Or they will be invalidated.

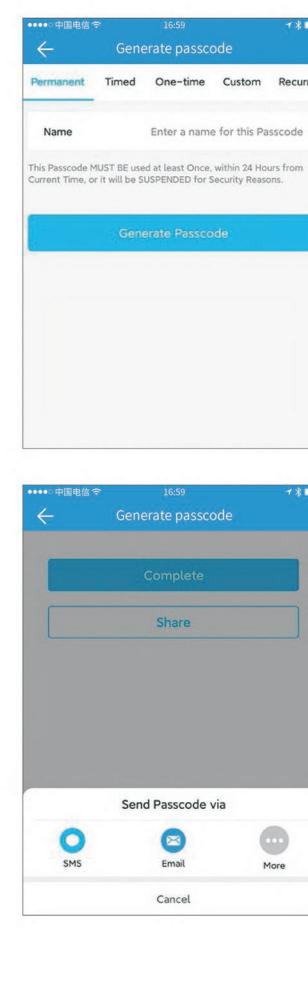

## ③ Password management


In the passcode's detail page, you can view, change, share, and delete it. Only passcodes have been used on lock can be changed.

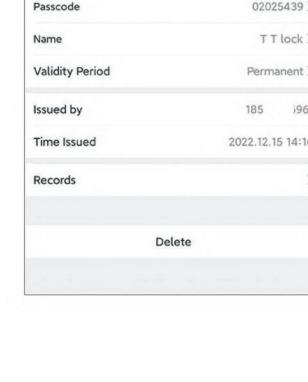

## ④ QR code

### QR code lock unlocking

All the generated QR codes will be listed here. In the QR code's detail page, you can view, change, share, and delete it. Select validity period type and enter the name to create a QR code. The QR code link can be sent to others via SMS, email, and etc.

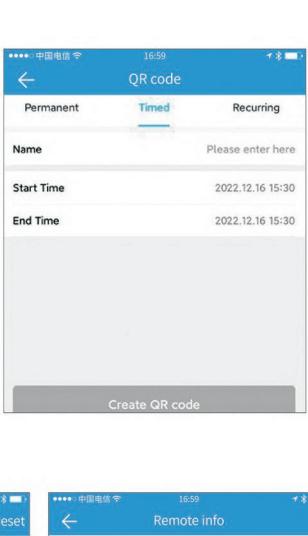

## ⑤ Remote

All remote control of this lock will be listed here. Click "Reset" at the top right to delete all of them.

In the remote control's detail page, you can view, change, and delete it.

Select validity period type and enter the name, then make the device into setting mode and add it with app.

Remote

Records

Setting

Authorized Admin

QR code

Lock Clock

Diagnosis

Upload Data

Import from another lock

Firmware Update

Lock Clock

Diagnosis

Upload Data

Import from another lock

Firmware Update

Lock Clock

Diagnosis

Upload Data

Import from another lock

Firmware Update

Lock Clock

Diagnosis

Upload Data

Import from another lock

Firmware Update

Lock Clock

Diagnosis

Upload Data

Import from another lock

Firmware Update

Lock Clock

Diagnosis

Upload Data

Import from another lock

Firmware Update

Lock Clock

Diagnosis

Upload Data

Import from another lock

Firmware Update

Lock Clock

Diagnosis

Upload Data

Import from another lock

Firmware Update

Lock Clock

Diagnosis

Upload Data

Import from another lock

Firmware Update

Lock Clock

Diagnosis

Upload Data

Import from another lock

Firmware Update

Lock Clock

Diagnosis

Upload Data

Import from another lock

Firmware Update

Lock Clock

Diagnosis

Upload Data

Import from another lock

Firmware Update

Lock Clock

Diagnosis

Upload Data

Import from another lock

Firmware Update

Lock Clock

Diagnosis

Upload Data

Import from another lock

Firmware Update

Lock Clock

Diagnosis

Upload Data

Import from another lock

Firmware Update

Lock Clock

Diagnosis

Upload Data

Import from another lock

Firmware Update

Lock Clock

Diagnosis

Upload Data

Import from another lock

Firmware Update

Lock Clock

Diagnosis

Upload Data

Import from another lock

Firmware Update

Lock Clock

Diagnosis

Upload Data

Import from another lock

F